

Saramonic®

5.8GHz Wireless
Microphone System
VmicLink5

Statement

Please read this manual carefully before using. Operate and store strictly in accordance with the instructions. Please retain this manual for your future reference.

If the user manual can not help you to solve certain problems, please ask your retailer for help or email us: **info@saramonic.com**.

Cautions

1. Do not use the unit under water, don't expose it to rain.
Please store it in a cool, dry place.
2. Please use and store unit at a normal temperature. Do not move it from a very hot to very cold environment frequently, as that can damage the unit. Keep away from heat sources, such as heater units, or ovens.
3. When using and storing, please do not expose to excessive dust or moisture.
4. Be careful to avoid violent collisions.
5. To avoid acoustic feedback, do not hold the microphone close to loudspeakers.
6. For the best sound pick-up pattern do not hold your hand against the microphone head.
7. Remove the batteries from the battery compartment when the device is not in use for a long period of time.

Contents

General Introduction	2
<hr/>	
Highlights	2
<hr/>	
Portable Receiver VmicLink5-RX	2
Product Structure	2
Attaching Accessories	3
LCD Display Operation Guide	3
<hr/>	
Body-pack Transmitter VmicLink5-TX	5
Product Structure	5
Attaching Accessories	6
LCD Display Operation Guide	6
<hr/>	
Battery Charger	8
<hr/>	
Specifications	8
<hr/>	
Packing List	9
<hr/>	
Package	9

1 General Introduction

The Saramonic VmicLink5 wireless microphone system utilizes the new 5.8GHz transmission technology to transfer high quality audio.

One receiver can work with up to three transmitters simultaneously, making it a useful and flexible tool for audio recording, DSLR video, field recording, filmmaking, broadcast & TV, electric news gathering (ENG), on-the-spot interviews, sound design and more.

2 Highlights


- The 5.8GHz transmission frequency provides high quality audio.
- Three discrete channel groups.
- Record audio up to 30 meters away in open areas.
- Automatic channel switch programme to avoid interference from multiple systems in the same environment.
- With three discrete channel groups.
- One receiver can work with up to three transmitters simultaneously.
- Line & Mic inputs provide wide range of input options.
- Real-time headphone monitor jack.
- Detachable and flexible antenna can be rotated 360° accordingly for best sound.
- Rechargeable li-ion battery (included).

3 Portable Receiver VmicLink5-RX

The Saramonic VmicLink5-RX is a camera-mountable integrated wireless receiver. It features an easy-to-read LCD display and DigRF synchronization between transmitter and receiver.

The selectable output mode allows you to choose the output signal to be mono or stereo.

3.1 Product Structure

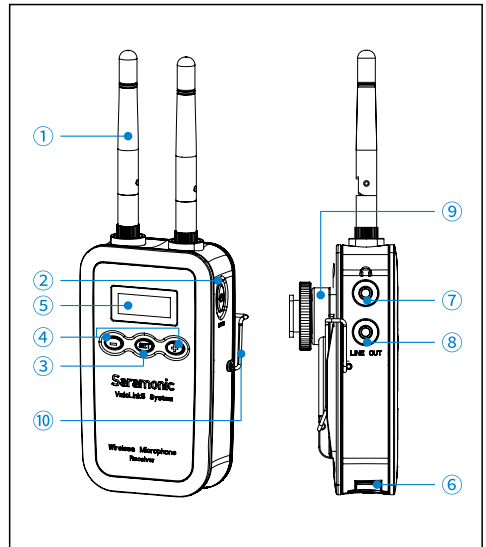

① Antennas

Screw clockwise to install.

Screw counterclockwise to dismantle.

Adjust the antennas accordingly to get the best sound reception.

② Power / Mute button

Function	Operation
Power ON	Hold button for one second or longer
Power OFF	Hold button until it turns off
Mute ON	Press button once
Mute OFF	

③ SET button

Hold down the SET button to select the displayed menu option.

Then, press the SET button to confirm your option, or hold down to exit without saving.

④ + or - button

Select functions or values shown on the display.

⑤ LCD display

Display menus, please refer to "1.3.3 LCD Display Operation Guide" (page 3) for more details.

⑥ Battery compartment

Install battery:

Slide the switch on the battery compartment cover in the direction indicated by the arrow to open.

Install a battery properly and the battery will be locked automatically. Slide the switch to close the battery compartment.

Remove a battery:

Slide the switch on the battery compartment cover in the direction indicated by the arrow to open. Slide the battery locking unit to release the battery.

⑦ PHONE jack

3.5mm stereo mini headphone jack.

Connect a headphone to monitor the audio output.


⑧ LINE out jack

Connect the RX to a video camera, camcorder, mixer or amplifier with the supplied output cable.

⑨ Standard cold shoe mount


⑩ Belt clip

3.2 Attaching Accessories

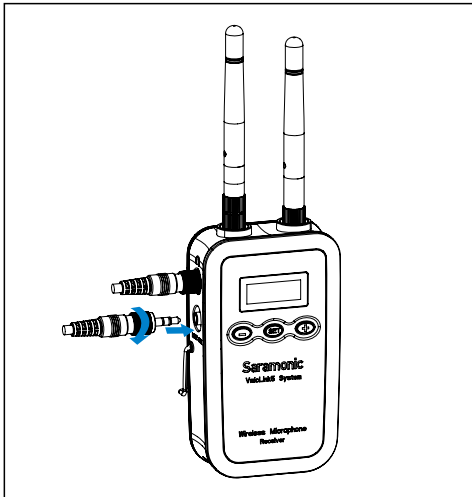

Connect the supplied cable to the Line out


- Plug the supplied 3.5mm cable into the LINE OUT.
- For a secure connection, rotate clockwise to lock the connector.

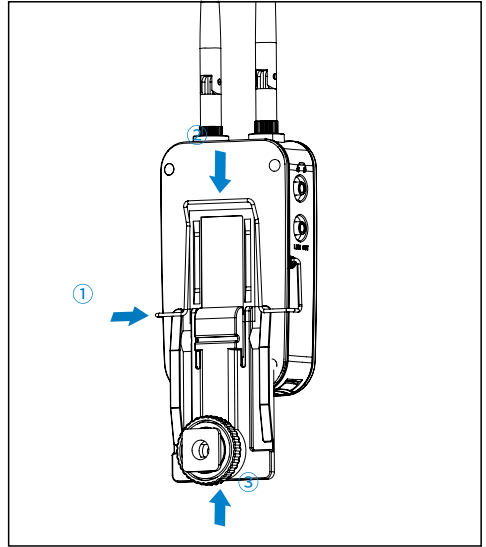

Attach the shoe mount adapter

- ① Please attach the belt clip upside-down before attaching the shoe mount adapter.
- ② Push the bottom of the belt clip to make some space between the belt clip and the receiver.
- ③ Align the belt clip with the two vertical grooves on the shoe mount adapter and insert the adapter in the direction of the arrow. Push the shoe mount adapter in fully until the belt clip fits into the horizontal groove on the adapter..

3.3 LCD Display Operation Guide



Home screen

If no operation is performed for 20 seconds on the other screens, the display will automatically return to the home screen.

① RX & TX connecting indicator

"---": The RX hasn't been matched with a TX in this group.

"A" or "B" or "C" flashing: The RX has been matched but hasn't been connected with the TX in this group.


"A" or "B" or "C" solid: The RX has been matched with the TX successfully in this group.

NOTE: Details please refer to "Match with TX" & "Match with RX" (page 4/7).

② Volume indicator

Indicates the volume of audio output.

③ Mute indicator

 MUTE ON  MUTE OFF

NOTE: MUTE on RX will mute the output audio.

④ Battery level indicator

Displays the battery level. Please replace both batteries immediately when the indicator starts flashing.


NOTE: Low battery might cause an unstable transmission of audio signal.

⑤ Current channel

Once the RX is matched with the TX(s), the channel number of TX(s) will be changed in sync with RX.

NOTE: The channel can only be changed manually in the RX.


Once the RX is matched with the TX(s), the channel number of TX(s) will be changed in sync with RX.



Set output volume

Hold down the SET button to enter the menu. Use the "+" and "-" buttons to set the volume of the output audio within the range of 0 to 31. Press once to save and exit. The setting is retained even after the power is turned off.

- Default is "25."




Output mode

The output mode can be set to either mono or stereo.

When the output mode is set to mono, the audio from the left and right channels will be mixed. When it is in stereo the left and right audio channel outputs will be separated.

In stereo mode, the audio of groups A & C will be output to the left channel. The audio of group B will be output to right channel.

- Default is "mono."




Power locked / unlocked

Hold down the SET button to enter the menu. Use the "+" and "-" buttons to set the power button as "locked" or "unlocked".

Lock the power key to prevent the receiver from being turned off unwittingly during use.


- Unlocked: Hold down the power key to turn on/off the receiver (System default).
- Locked: The receiver will not be turned off even after pressing the power key.



Mute key enable / disable

Hold down the SET button to enable / disable Mute function.

- Enable: Press power button to turn Mute On / Off.
- Disable: The audio will not be muted during use.
- Default is "enable."



Match with TX

You will need to match the RX and TX units simultaneously. Hold down the SET button to enter "Match with TX". Press SET again to start


“Match with TX” in the RX (or “Match with RX” in the TX).

The group number of each TX(s) will be assigned as A, B, or C, based on the order they are matched in.

NOTE: Please match the TX and RX if they haven't been matched before.


Once RX and TX have been matched successfully, the setting is retained even after the power is turned off.

The RX and TX will automatically match with each other every time they are powered on afterwards. If you need to reset the TX and RX connection, select and confirm "Restore default" from the menu.



Set backlight


Select ON, OFF or Delay 10 / 30 / 60 seconds. Default is "Delay 10s."




Restore settings

Selecting this will restore the parameters of the RX to their factory default settings.

NOTE: The matching setting will also be cleared after restoring.



Version of the RX




Serial number

4 Body-pack Transmitter VmicLink5-TX

The VmicLink5-TX is a compact transmitter that employs a crystal-controlled PLL synthesizer. It is equipped with a muting function and lock-type Mic and Line input connectors.

4.1 Product Structure

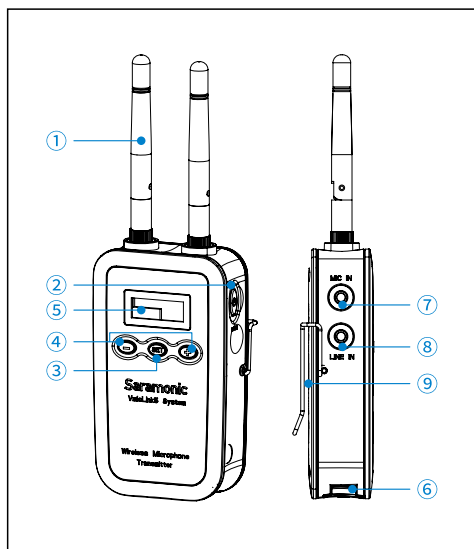

① Antennas

Screw clockwise to install.

Screw counterclockwise to dismantle.

Adjust the antennas accordingly to deliver the best transmission.

② Power / Mute button

Function	Operation
Power ON	Hold button for one second or longer
Power OFF	Hold button until it turns off
Mute ON	Press button once
Mute OFF	

③ SET button

Hold down the SET button to select the displayed menu option.

Then, press the SET button to confirm your option, or hold down to exit without saving.

④ **+ or - button**

Select functions or values shown on the display.

⑤ **LCD display**

Display menus, please refer to "1.4.3 LCD Display Operation Guide" for more details.

⑥ **Battery compartment**

Instructions for installing and removing the battery are the same as for the receiver (page 3).

⑦ **Mic input jack**


Connect to the supplied lavalier microphone.

⑧ **Line input jack**

Connect to audio devices with line output.


⑨ **Belt clip**

4.2 Attaching Accessories

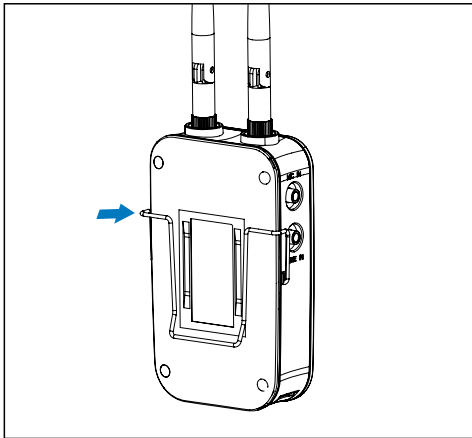

Attach a belt clip

Insert one end of the belt clip into one of two holes on either side of the transmitter, and then insert the other end into the hole on the other side.

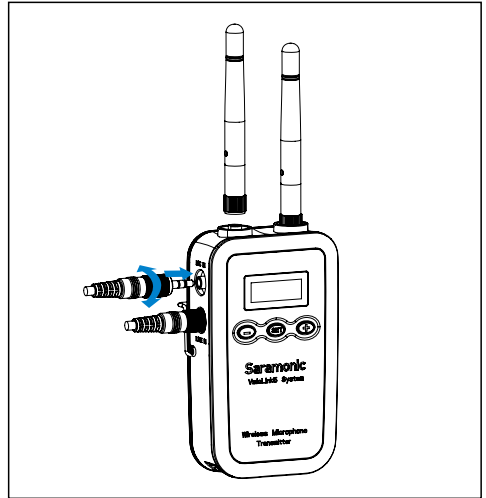


Connect the supplied cable to the Line out

- Connect the microphone / audio device.
- For a secure connection, turn to lock the connector.

NOTE: Please turn off the transmitter before attaching or removing the microphone / audio device.

4.3 LCD Display Operation Guide



Home screen

If no operation is performed for 20 seconds on the other screens, the display will automatically return to the home screen.

① **RX & TX connecting indicator**

"A or B or C": The TX has been matched with the RX successfully.

"○" & "●" flashing: The TX hasn't been matched with the RX.

NOTE: Details please refer to "Match with TX" & "Match with RX" (page 4/7).

② **RF level indicator**


Indicates the current transmission level.

③ Volume indicator

Indicates the volume of audio output.



④ Mute indicator

 MUTE ON  MUTE OFF

NOTE: If turn on Mute of the TX, only this TX will be muted.

Mute key enable / disable


Hold down the SET button to enable / disable Mute function.

- Enable: Press power button to turn Mute On / Off.
- Disable: The audio will not be muted during use.
- Default is "enable."

⑤ Battery level indicator

Displays the battery level. Please replace the battery immediately when the indicator starts flashing.

NOTE: Low battery might cause an unstable transmission of audio signal.



Match with RX

- You will need to match the RX and TX units simultaneously. Hold down the SET button to enter "Match with TX". Press SET again to start "Match with TX" in the RX (or "Match with RX" in the TX).
- The group number of each TX(s) will be assigned as A, B, or C, based on the order they are matched in.

⑥ Current channel

Displays the current channel number.

NOTE: The channel can only be changed manually in the RX.

Once the RX is matched with the TX(s), the channel number of TX(s) will be changed in sync with RX.



Volume setting

Hold down the SET button to enter the menu. Use the "+" and "-" buttons to set the volume of the output audio within the range of 0 to 31. Press once to save and exit. The setting is retained even after the power is turned off.

- Default is "25."

NOTE: Please match the TX and RX if they haven't been matched before
Once RX and TX has been matched successfully, the setting is retained even after the power is turned off.
The RX and TX will automatically match with each other everytime after powered on.
When need to relieve TX and RX connection, select and confirm "Restore default" menu.




Power locked/ unlocked

Hold down the SET button to enter the menu. Use the "+" and "-" buttons to set the power button as "locked" or "unlocked".

Lock the power key to prevent the receiver from being turned off unwittingly during use.


- Unlocked: Hold down the power key to turn on/off the receiver (System default).
- Locked: The receiver will not be turned off even after pressing the power key.



Set backlight

Set the background LED light to ON or Delay 60/30/10 seconds or OFF.

Default is "Delay 10s."



Restore default setting

Restore all settings of the TX to default settings.

NOTE: The matching setting will also be cleared after restoring.



Version of the TX



Serial number

5 Battery Charger

Use the battery charger to recharge the battery of VmicLink5 system.

The indicator turns red while the battery is charging.


The indicator turns green while the battery has been fully charged.

6 Specifications

VmicLink5 System	
RF power	15dBm(30mW)
RF frequency	5725-5875MHz
Channel	3CH, RX channel changeable, TX follow with RX
Transmission distance	30m with no obstacle
Interface	Transmitter Mic in: Max 160mV/-13dBu, 1.8V phantom power
	Transmitter Line in: Max 2V/8dBu, 50V DC isolation
	Receiver Phone out: Max 70mW/32Ω, 10V DC isolation
	Receiver Line out: 4 times mic in gain, 50V DC isolation
Receive sensitivity	98dB
THD+N	-92dB
Sample rate	48K/16bit

Audio frequency response	40Hz-18KHz±1dB
Voice delay	18ms
Power consumption	RX: 180mA/6V
	TX: 140mA/6V
Antenna gain	3dBi
Weight	810g
Battery	7.2V/1000mAh Li-ion
Battery type	LP-E17(CANON EOS M3/750D/760D)
Dimensions	RX: 113x64x28mm
	TX: 113x64x28mm
Operating temperature	0°C-50°C
Storage temperature	-20°C-55°C

7 Packing List

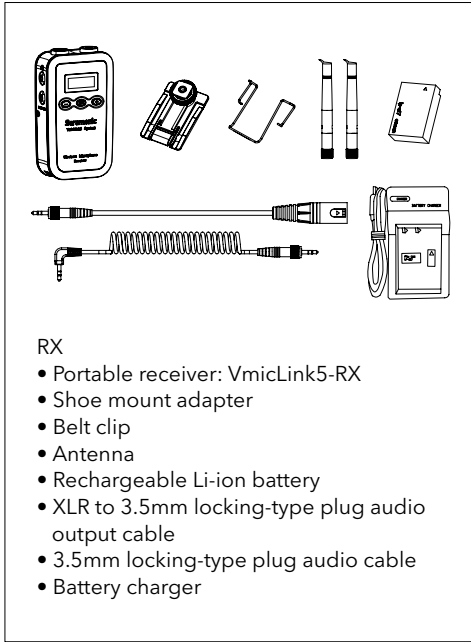

RX

- Portable receiver: VmicLink5-RX
- Shoe mount adapter
- Belt clip
- Antenna
- Rechargeable Li-ion battery
- XLR to 3.5mm locking-type plug audio output cable
- 3.5mm locking-type plug audio cable
- Battery charger

8 Package

VmicLink5 RX+TX

This package includes one receiver RX and one transmitter TX.


VmicLink5 RX+TX+TX

This package includes one receiver RX and two transmitters TX.

VmicLink5 RX+TX+TX+TX

This package includes one receiver RX and three transmitters TX.

NOTE: The RX and TX in different packages can be matched.

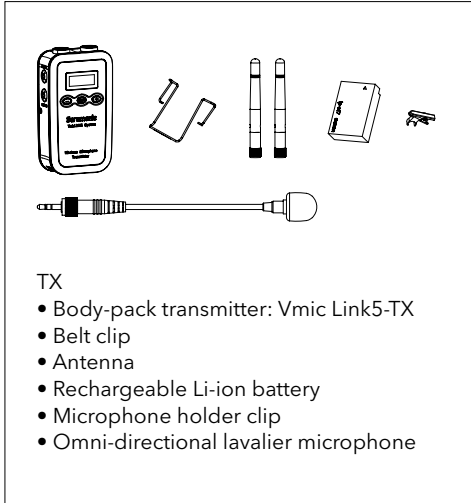

TX

- Body-pack transmitter: Vmic Link5-TX
- Belt clip
- Antenna
- Rechargeable Li-ion battery
- Microphone holder clip
- Omni-directional lavalier microphone

- Warranty card
- User manual

www.saramonic.com

The Saramonic logo is trademark which is registered and owned by Saramonic International.

COPYRIGHT 2011-2021 SARAMONIC INTERNATIONAL (A brand of DSQN)

Email: info@saramonic.com